

ACCESSORIES AND PARTS

	403	BATTERY		426	YELLOW SPONGE DISC
	404	CHARGER		428	FINE SCRUB DISC
	405-BL (Black) 406-G (Green) 406-R (Red) 406-B (Blue) 406-W (White)	7 3/4" SCRUBBING PADS		429	COARSE SCRUB DISC
	407	PAD HOLDER		430	SCRUB DISC
	408	LONG BRISTLE SOFT BRUSH		431	BASEBOARD BRUSH
				433	BASEBOARD BRUSH W/GRIT (NOT SHOWN)
	409P	AGGRESSIVE DUTY BRUSH – ORANGE ONLY		432	AGGRESSIVE DUTY BRUSH WITH SPLASH GUARD
	413-15	HANDLES 15" Handheld		435	TERRY CLOTH BONNET
	413-30	30" Adjustable			
	413-48	48" Adjustable			
	416	5 FOOT BATTERY CORD		437	MICRO FIBRE BONNET / THIN LINE
				438	MICRO FIBRE BONNET / THICK LINE
	421	MEDIUM DUTY BRUSH		439	WAX APPLICATOR DISC
	422	12V DC BATTERY POST ADAPTER		411	HUB
	423	CIGARETTE LIGHTER ADAPTER		424	25 FOOT CORD
PICTURE NOT AVAILABLE	418	BATTERY HARNESS 12V PANEL MOUNT RECEPTACLE YOKE		417	HANDLE SWITCH ASSEMBLY
	425				
	414				

